


## ABC & 123 Electronic Flash Card™

Got a minute? The ABC & 123 Electronic Flash Card™ is a great, hands-on way to reinforce alphabet and number skills.

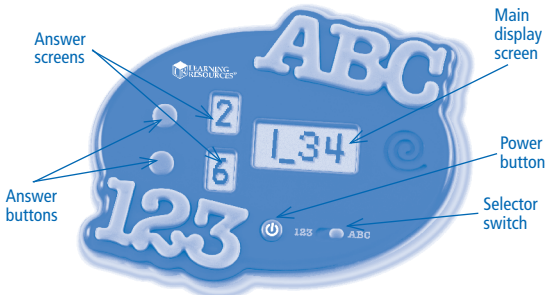

## **How to Play:**

Press the **POWER** button to turn the unit on or off.

Slide the Selector switch to choose between **GAME 1 (ABCs)** and **GAME 2 (123s)**.

Then, press one of the Answer buttons to choose a difficulty level (1 or 2) and start the game.

## **GAME 1—ABCs**

This game is great for reinforcing alphabet skills. Start with Level 1 for upper- and lowercase matching fun! Then, try Level 2—a great way to practice alphabet sequencing.

### **Level 1**

The main display will show a letter of the alphabet (uppercase or lowercase). Find the letter that matches it in one of the two answer screens and press the button next to that screen.

For example, if the screen shows an uppercase letter *B*, look at the two answer screens and find the one that shows the lowercase letter *b*. Press the button to the left of that screen to select the correct answer. Think fast! You have 60 seconds to get as many correct answers as possible.

## Level 2

The main display will show a sequence of letters, with one missing letter. Find the letter that is missing in one of the two answer screens and press the button next to that screen.

For example, if the screen shows a sequence of the letters  $B C D \_$ , look at the two answer screens and find the one that shows the letter  $E$ . Press the button to the left of that screen to select the correct answer. As in Level 1, you have 60 seconds to get as many correct answers as possible.

## GAME 2—123s

This game is perfect for reinforcing basic number and counting skills. Level 1 offers counting practice. Level 2 features sequencing of numbers  $1-10$ .

### Level 1

The main display will show a number of dots. Count them up, find that number in one of the two answer screens and press the button next to that screen.

For example, if the screen shows a row of dots ( $\bullet \bullet \bullet \bullet$ ), look at the two answer screens and find the one that shows the number 4. Press

the button to the left of that screen to select the correct answer. You have 60 seconds to get as many correct answers as possible.

## **Level 2**

The main display will show a sequence of numbers, with one number missing. Find the missing number in one of the two answer screens and press the button next to that screen.

For example, if the screen shows a sequence of the numbers 4 5 6 \_, look at the two answer screens and find the one that shows the number 7. Press the button to the left of that screen to select the correct answer. As in Level 1, you have 60 seconds to get as many correct answers as possible.

## **Scoring**

When the time runs out, it's GAME OVER. The number of correct answers will be shown on the screen. Keep trying and go for your high score!

To save battery power, the ABC & 123 Electronic Flash Card will power down automatically if there is no activity after 3 minutes.

## Battery Information

### Installing or Replacing Batteries

**WARNING!** To avoid battery leakage, please follow these instructions carefully. Failure to follow these instructions can result in battery acid leakage that may cause burns, personal injury, and property damage.

**Requires:** 3 x 1.5V AAA batteries and a Phillips screwdriver

- Batteries should be installed or replaced by an adult.
- ABC & 123 Electronic Flash Card™ requires (3) three AAA batteries.
- The battery compartment is located on the back of the unit.
- To install batteries, first undo the screw with a Phillips screwdriver and remove the battery-compartment door. Install batteries as indicated inside the compartment.
- Replace compartment door and secure with screw.

### Battery Care and Maintenance Tips

- Use (3) three AAA batteries.
- Be sure to insert batteries correctly (with adult supervision) and always follow the toy and battery manufacturer's instructions.

- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix new and used batteries.
- Insert battery with the correct polarity. Positive (+) and negative (-) ends must be inserted in the correct directions as indicated inside the battery compartment.
- Do not recharge non-rechargeable batteries.
- Only charge rechargeable batteries under adult supervision.
- Remove rechargeable batteries from the toy before charging.
- Only use batteries of the same or equivalent type.
- Do not short-circuit the supply terminals.
- Always remove weak or dead batteries from the product.
- Remove batteries if product will be stored for an extended period of time.
- Store at room temperature.
- To clean, wipe the surface of the unit with a dry cloth.
- Please retain these instructions for future reference.





Your opinion matters! Visit  
[www.LearningResources.com](http://www.LearningResources.com)  
to write a product review or to  
find a store near you.



© Learning Resources, Inc., Vernon Hills, IL, US  
Learning Resources Ltd., Bergen Way,  
King's Lynn, Norfolk, PE30 2JG, UK  
Please retain our address for future reference.  
Made in China. LPK6973-GUD

|                    |                                                                  |
|--------------------|------------------------------------------------------------------|
| Fabriqué en Chine. | Informations à conserver.                                        |
| Made in China.     | Bitte bewahren Sie unsere<br>Adresse für spätere Nachfragen auf. |
| Hecho en China.    | Conservar estos datos.                                           |